

September 2, 2014 Version 1.3

Installation manual

Installation PC-Software for programming remote displays

Create a new local folder for any version.
Save file ,V100DGxxx.exe' in this new folder.
From version 3.0 save file ,language.mlf' in this folder too.

Installation PC-Software BootLoader

Create a new local folder.
Save file 'MegaLoad.net' in this new folder.

Firmware update V25N, V60N, V100N, V100C

Save file ,LED100_CNTR_xx.hex' to local PC.
The file suffix must be '.hex'.

Break power to remote display Vxxx.
Connecting data cable from PC to remote display, you can use our adapter KadVPlus.

Starting program ,MegaLoad' and use the file LED100_CNTR_xxx.hex.
Select your Com Port and set **speed to 9600 Baud**.

If you switch on power to remote display the update is starting automatically.
The update has finished when the remote display indicate the version number.

Firmware update V160DGxR

Save file ,LEDV160_CNTR_xxx.hex' to local PC.
The procedure is the same as above but with **speed 115kpbs**.